

### Maintenance

Our fixations can be cleaned with a lightdamp cloth. Do not use aggressive cleaning products and do not wash them in the washing machine!

## Lockable side release buckles

- \* Your car restraint system is equiped with lockable side release buckles. Tighten lock buckles only when absolutely necessary!
- \* Please try after some time if it is possible to release some or all of the seven buckles.



Version 7/13-06-2017

## Safety

- \* Use of the cars standard safety belt remains mandatory when using the B&S Car restraint system!
- \* The use of the car restraint system is always at own risk!
- \* We therefore strongly recommend installing the included emergency safety belt cutter!





We declare hereby that the B&S Car restraint system conforms with the equivalent rules of the medical product and the guideline 93/42EEG.



 
B&S BV
Kathodeweg 5
1627 LK HOORN
Holland
Telefoon +31 229 285022
info@onbeperktinbeweging.nl
www.onbeperktinbeweging.nl

B&S BV Xenonweg 7A 3812 SZ AMERSFOORT Holland Telefoon +31 33 7440220 info@onbeperktinbeweging.nl www.onbeperktinbeweging.nl

# *Installation instructions*

# **B&S** Car restraint system







#### 'standard seat'

Place the basic belt over the backrest, see figure 1.
 If necessary fold down the back temporarily.
 The basic belt is inserted between the seat and backrest, see figure 3. If the restraint system is used for taller children, the basic belt is installed across the headrest.



2. Tighten the two securing belts (A). The two side release buckles are on the rear side of the backrest, see picture 2.



- 4. Fix the restraining vest to the basic belt using the seven plastic side release buckles and adjust the length of the straps to the measurements of the child.
- 5. Finally always use the standard safety belt for safe and legally permitted transportation of the child in the car.



We wish you safe driving!

## 'fixed seat'

1. Place the basic belt over the backrest and over the seat, see figure 4.

2. The included 'mounting set fixed seat' is tighten on the belts which go over the seat (A). The connection straps (B) are placed between the seat legs. The belts are fixed at the rear site of the backrest (C).



- 3. The included 'extra belt to prevent floating'
  (D) needs to be fixed at the sit angle around the backrest. This prevents 'floating' of the basic belt above the seat, see picture 6.

  NB. The seventh point is behind this belt to 'provide floating over the seat' (F) and then over/under the seat to the valve closure at the rear of the backrest (E).
- 3. Fix the restraining vest to the basic belt using the seven plastic side release buckles and adjust the length of the straps to the measurements of the child.
- 4. Finally always use the standard safety belt for safe and legally permitted transportation of the child in the car.



We wish you safe driving!